

crazy8 | Pattern Mode

Change Pattern cycle through patterns 1-16

Select Track shift + any white key **Mute/Unmute** any white key

Pattern Properties

hold ▶ duty crazy offset rate swing ← turn to edit

white keys can also change rate and swing

Copy shift + ▼ c **Paste** shift + ▲ p

Transpose ▼ or ▲ for +/- 1 semi, ▼ or ▲ + any note to jump

crazy8 | Chords

Assign a chord to a step (step mode)
Hold any key and roll the encoder

Enter Chord Editor
▼ + ▲

Exit Chord Editor
▼ or ▲

Select & Edit Chords
Roll Encoder and press keys

crazy8 | Step Mode

Select Step cycle through steps 1-16

Live Rec/Punch hold shift + key **Master Key Track** set to CH16

Clear shift + rest **Skip All/None** shift + skip

Transpose by Octave shift + ▼ or ▲ **Step Advance** shift + enc

crazy8 | Chain Mode*

Slot on/off chain + white

Change assigned pattern to slot hold white + set encoder

chain slots 1-8

*Pattern Mode Only!

crazy8 | Global Functions

Play Modes (Forward, Reverse, Pendulum, Random) shift + run

Tempo hold tempo + ↻ to increase/decrease, or tap tempo

MIDI CH hold encoder 2 sec. then any white and set with encoder

SYSEX Dump ▲ at startup **SYSEX Receive** ▼ at startup